



Cable holder type 50 SV II

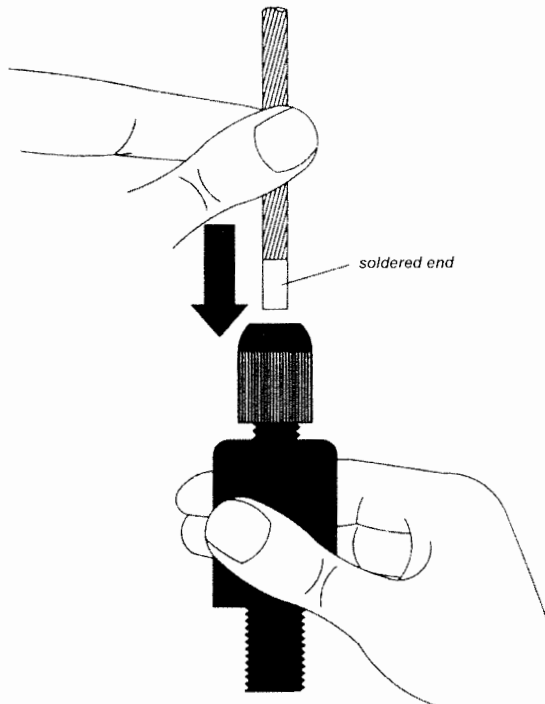

This cable exit angle may never exceed 5° (see illustration)

View through the plunger:
Holder is functional only if this structure is visible
(see illustration)

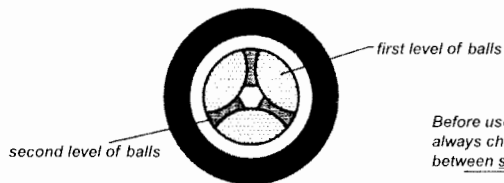

Before use of holder:
always check that the connection
between shell and coupling thread is firm!



GLOSSARY

You will find the following terms and abbreviations in this manual:

kg = kilograms

mm = millimeters

plunger = pipe sticking out of cable-holder; cable threads into it

Further samples of this manual, certificates and remarks pertaining to safe applications can be downloaded at www.reutlinger.de.